



Parts List for DC011 Type 2

Item Number	Part Number	Description	Qty Required
1	5140019-01	FRAME	1
2	5140019-02	SPEAKER GRILLE	2
3	5140019-03	CABINET	1
4	5140019-04	BUTTON	1
5	5140019-05	SPEAKER	2
6	5140019-06	BUTTON	1
7	5140019-07	CONTROL PWB ASSY	1
8	5140019-08	CHASSIS	1
9	5140019-09	FUSE	1
10	5140048-54	VOL PWB ASSY	1
11	5140019-11	CORE BOX ASSY	1
12	5140019-12	HOLDER	1
13	5140019-13	HLDR BATT	1
14	5140019-14	TRANSFORMER	1
15	5140019-15	PCB ASSEMBLY	1
17	5140019-17	FUSE	1
18	5140048-52	POWER PCB ASSY	1
19	5140019-19	CORD WRAP (L)	1
20	5140019-20	ROLL CAGE-LEFT	1
21	5140019-21	VOL. KNOB	1
22	5140019-22	TUNING KNOB	1
23	5140019-23	LATCH ASSY.	1
24	5140019-24	BATTERY DOOR	1
25	5140019-25	DOOR ASSEMBLY	1
26	5140019-26	UPPER HANDLE	1
27	5140019-27	BATTERY SOCKET ASSY	1
28	5140019-28	ANTENNA	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenetwork.com for current parts information.

Parts List for DC011 Type 2

Item Number	Part Number	Description	Qty Required
29	5140019-29	AUX JACK COVER	1
30	5140019-30	ROLL CAGE-RIGHT	1
31	5140019-31	CASE,ACC.STORAG	1
32	429790-33	POWER CORD	1
33	5140019-33	CORD WRAP (R)	1
34	5140019-34	SHOCK MOUNT	6
35	5140019-35	ANTENNA CONTACT	1
36	5140019-36	PCB ASSEMBLY	1
37	5140019-37	AUX.INPUT P.C.B	1
38	5140019-38	HOLDER,COVER	1
39	5140048-53	PCB ASSEMBLY	1
40	5140019-40	SEAL	1
41	5140019-41	CONTACT ASSY	1
42	5140019-42	TUNING PWB ASS'Y	1
43	5140019-43	CHARGER ASSY.	1
44	5140019-44	LED PWB ASS'Y	1
45	5140019-45	SEAL	1
46	5140019-46	AIR DUCT	4
47	5140031-49	SCREW KIT	1
48	429790-34	CORD BUSHING	1
846	5140019-47	HARDWARE BAG	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.